

Honeywell Launcher configuration .

The default username and password for the launcher is admin.

After launching the application and logging into the administrator account, at the bottom right of the settings box, there is a button that allows you to activate or deactivate the Launcher .

In the admin user, select:

admin 24 as the administrator password

Turn off the volume buttons after adjusting the volume to the correct level.

Disconnection timeout: never disconnect

Motion settings disabled

Disconnection delay: Never disconnect automatically

Single sign-on: disabled

Within the permissions

Application mode, select Single application mode

User mode, select multiple users

Create a user billetix with password 123456

In the user settings, for the billetix user, select:

Choose the Enterprise browser from the whitelist of

Wi-Fi: Yes

Switch to Wifi Yes

Wi-Fi settings Yes

Configure automatic startup Yes

EZConfig Barcode Yes

applications

Configure the enterprise browser

To reset Enterprise Browser if necessary, clear the application data in the application manager.

Additional parameters after initialization

Configuration

Block pop-ups: no

Swipe to refresh: yes

Video: no

Geolocation: no

Security

Change nothing

Display

Hide the system bar: yes

Select the system bar: both

Menu bar mode: cache

Browser orientation mode: portrait

Portal

Leave only the 1 active

Advanced

Activate the list of allowed URLs

Add a new URL to the list of URLs: <https://billetix.net/scan.html>

Homepage: select <https://billetix.net/scan.html>

Active zoom: No

Zoom control not

In the web page reload menu, choose when the internet is connected.

Then, log out of the admin user and log in to the billetix user .

To exit Billetix user mode, you need to restart the PDA.